

**HT14N
ANALOG MULTIMETER**

HT14N is a analog multimeter for AC/DC voltage up to 500V, DC current up to 100mA, resistance and battery test. HT14N is provided with test leads, battery, rubber holster and user manual.

Functions

DC voltage with 2.5, 25, 250, 500V scales
AC voltage with 25, 250, 500V scales
DC current with 1, 10, 100mA scales
Resistance with Rx10, Rx100, Rx1000 scales
1.5V and 9V test batteries
Safety: IEC/EN61010-1, CAT II 300V
Power supply: 1x1.5V battery type AA LR06
Size (LxWxH): 145x80x45mm
Weight (included battery): 25g



HT14N
HR000114

**HT20
PEN VOLTAGE DETECTOR WITH
WHITE LED TORCH**

The HT20 pen voltage detector permits to quickly verify the presence of AC voltage on any type of electrical installations with and without direct contact. A red LED light on and a beeper detect the presence of voltage. HT20 is provided with batteries and user manual.

Functions

AC voltage range: 100V ÷ 1000V to ground
Frequency range: 50/60Hz
Red LED and buzzer for voltage detection
White LED torch with ON/OFF key
Practical pen clip
Safety: IEC/EN61010-1, CAT IV 1000V
Pollution degree: 2
Power supply:
2x1.5V batteries type AAA IECLR03
Size (LxWxH): 160 x 26 x 20mm
Weight (with batteries): 48g



HT20
HR000296


**HT70
PEN PHASE SEQUENCE AND CONFORMITY
INDICATOR**

HT70 verifies the presence of AC voltage with and without direct contact and performs phase sequence and conformity test on three phase plants. HT70 is provided with batteries and user manual.

Functions

AC voltage range: 100V ÷ 1000V to ground
Frequency range: 50/60Hz
LED red/green + buzzer for indication of test
Pocket clip
Safety: IEC/EN61010-1, CAT IV 1000V
Pollution degree: 2
Power supply: 2x1.5V batteries type AAA IECLR03
Battery life: >9000 tests
Size (LxWxH): 160 x 26 x 20mm
Weight (included batteries): 48g

HT70
*IT PERFORMS
THE PHASE SEQUENCE
TEST ON THE CABLE
SHEATH TOO*

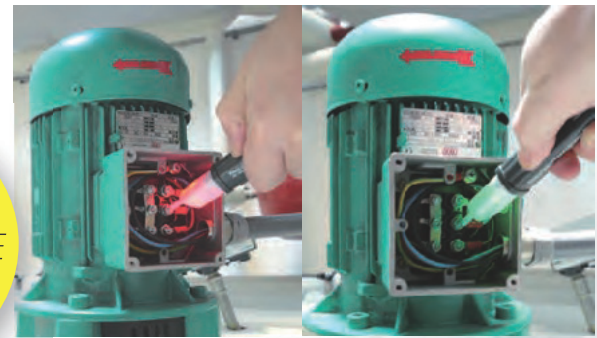

Incorrect phase sequence

Correct phase sequence



HT70
HR000070



www.youtube.com/user/HTInstruments1

**HT82
PHASE SEQUENCE INDICATOR**

HT82 model is a digital portable meter to perform the phase sequence indication with 3-wire method on standard three phase system. The meter shows the "R" indication in positive test and "L" indication in the opposite case. HT82 is provided with 3 cables, 3 alligator clips, carrying bag and user manual.

Functions

AC voltage range from 40 to 690V
Frequency range: from 15Hz to 400Hz
"R" and "L" indications at display
LCD custom display
Protection holster
Safety: IEC/EN61010-1, CAT III 600V
Power supply: directly from network
Size (LxWxH): 130x69x22mm
Weight: 130g



HT82
HR000156



宇宏企業股份有限公司

台北：三重區重新路五段609巷16號6樓之1 新竹：新竹縣竹北市台元26號4樓之10
TEL:02-22782269 FAX:02-22782059 TEL:03-552-6779 FAX:03-552-6739
<http://www.fluke-tektronix.tw> <http://www.radiotek.com.tw>

1. ELECTRICAL SPECIFICATIONS

- AC voltage range detection: 100 ÷ 1000V AC to ground
- Frequency range: 50/60Hz
- Phase sequence indication with 1-wire
- Conformity test with 1-wire
- Safety: IEC/EN61010-1
- Category of measurement: CAT IV 1000V
- Insulation: double insulation
- Pollution degree: 2

2. GENERAL SPECIFICATIONS

- Red LED indication => incorrect phase sequence indication
- Green LED indication => correct phase sequence indication
- Buzzer indication
- Power supply: 2x1.5V batteries alkaline type AAA NEDA24A LR03
- Working temperature: -10°C ÷ 50°C
- Working humidity: <75%HR (-10°C ÷ 40°C)
<45%HR (40°C ÷ 50°C)
- Dimensions (L x W x H) : 160x26x20mm
- Weight (included batteries): 48g



Incorrect phase sequence



Correct phase sequence

This product conforms to the prescriptions of the European directive on low voltage 2006/95/EEC and to EMC directive 2004/108/EEC